



FR 701® -  
2100  
Wheat  
130

[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Quartz  
380

[add to folder](#)  
[request sample](#)



FR  
701® -  
2100  
Pumice  
423

[add to folder](#)  
[request sample](#)




FR 701® -  
2100  
Light Moss  
754

[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Desert Sand  
758

[add to folder](#)  
[request sample](#)

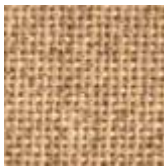


FR  
701® -  
2100  
Vanilla  
Neutral  
403

[add to folder](#)  
[request sample](#)

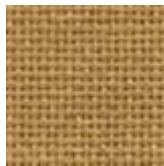

FR 701® -  
2100  
Straw  
747

[add to folder](#)  
[request sample](#)

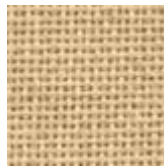


FR 701® - 2100  
Bone  
748

[add to folder](#)  
[request sample](#)




FR  
701® -  
2100  
Apricot  
Neutral  
404

[add to folder](#)  
[request sample](#)

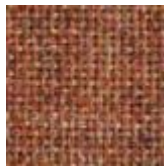


FR 701® -  
2100  
Cinnabar  
422

[add to folder](#)  
[request sample](#)

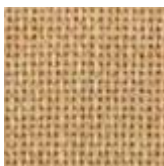

FR 701® - 2100  
Buff  
460

[add to folder](#)  
[request sample](#)

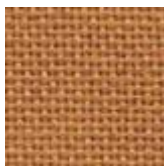


FR 701® - 2100  
Terra  
751

[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Rose Quartz  
390

[add to folder](#)  
[request sample](#)

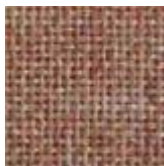

FR 701® - 2100  
Cherry Neutral  
400

[add to folder](#)  
[request sample](#)

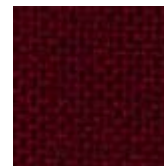

FR 701® -  
2100  
Claret  
Accent  
418


[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Sienna  
475  
[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Bronze  
545  
[add to folder](#)  
[request sample](#)

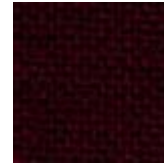


FR 701® - 2100  
Deep Burgundy  
556  
[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Lavendar Neutral  
405  
[add to folder](#)  
[request sample](#)

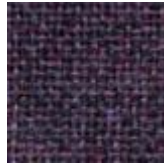

FR 701® - 2100  
Amethyst  
424  
[add to folder](#)  
[request sample](#)

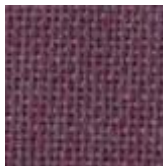


FR 701® - 2100  
Lilac  
752  
[add to folder](#)  
[request sample](#)

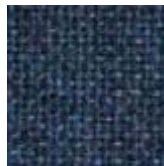

FR 701® - 2100  
Wedgewood  
150  
[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Baltic  
153  
[add to folder](#)  
[request sample](#)

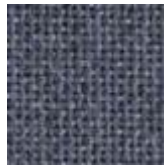


FR 701® - 2100  
Crystal Blue  
175  
[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Blue Neutral  
401  
[add to folder](#)  
[request sample](#)

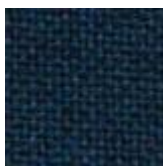


FR 701® - 2100  
Ultramarine  
470  
[add to folder](#)  
[request sample](#)

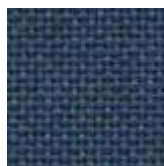


FR 701® - 2100  
Bayberry  
486  
[add to folder](#)  
[request sample](#)

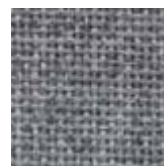

FR 701® - 2100  
Bleu Papier  
539  
[add to folder](#)  
[request sample](#)

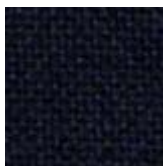

FR 701® - 2100  
Blue Plum  
553  
[add to folder](#)  
[request sample](#)

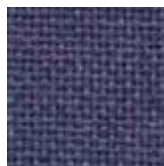


FR 701® - 2100  
Violet  
753  
[add to folder](#)  
[request sample](#)

[last page<<](#)

[next page>>](#)




FR 701® - 2100  
Lake  
756  
[add to folder](#)  
[request sample](#)

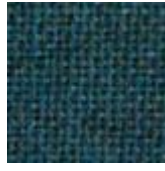

FR 701® - 2100  
Aquamarine  
381  
[add to folder](#)  
[request sample](#)




FR 701® - 2100  
Eucalyptus  
468  
[add to folder](#)  
[request sample](#)

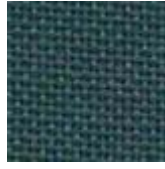

FR 701® - 2100  
Chrome Green  
549  
[add to folder](#)  
[request sample](#)



FR  
701® -  
2100  
Verte  
Papier  
561  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Green Neutral  
402  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Blue Spruce  
467  
[add to folder](#)  
[request sample](#)



FR  
701® -  
2100  
Dune  
749  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Leaf  
755  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Stream  
757  
[add to folder](#)  
[request sample](#)

[last page<<](#)  
[next page>>](#)



FR 701® -  
2100  
Grey Mix  
238  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Medium Grey  
298  
[add to folder](#)  
[request sample](#)



FR 701® -  
2100  
Opal  
394  
[add to folder](#)  
[request sample](#)



FR 701® - 2100  
Silver Neutral  
406  
[add to folder](#)  
[request sample](#)




FR  
701® -  
2100  
Pearl  
481  
[add to folder](#)  
[request sample](#)



FR 701® -  
2100  
Silver Papier  
538

[add to  
folder](#)  
[request  
sample](#)

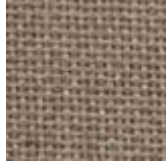

FR 701® - 2100  
Cement Mix  
750

[add to folder](#)  
[request sample](#)



FR  
701® -  
2100  
Black  
408

[add to  
folder](#)  
[request  
sample](#)

'Color and pattern may vary from monitor to monitor.  
Please send for actual samples.'